





Window Film is estimated a bit differently than glass, or even blinds. We're looking for the total square footage of actual glass, so that we can best utilize our window film material, and offer the best price to our customers.

When you measure your homes windows, use a tape measure, and only measure the glass area of each pane of glass. The examples below will give you a good idea of how to do this.

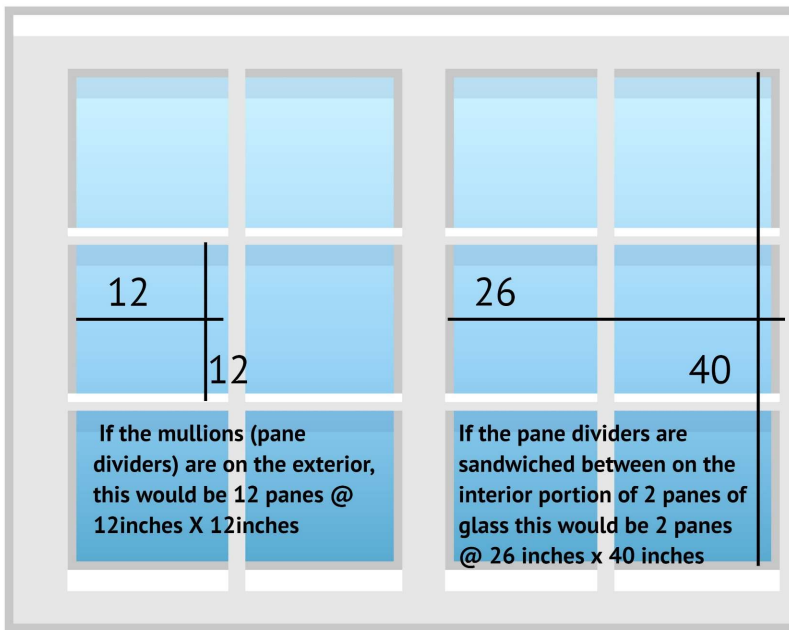

Example 1

Example 2

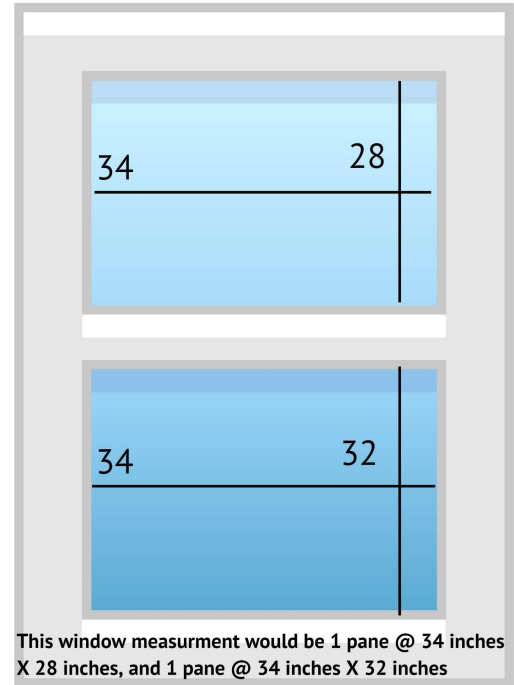

Example 3

Example 1: French paned windows with dividers on the exterior side of the glass: 12 panes @ 12 inches X 12 inches.

Example 2: Decorative French Panes where the dividers are on the interior portion of your double paned windows: 2 panes @ 26 inches width X 40 inches length.

Example 3: Typical Double Hung Window: 1 pane @ 34 inches width X 28 inches height and 1 pane @ 34inches width X 32 inches height.

DENVER METRO
 10422 HEINZ WAY, UNIT A
 HENDERSON, CO 80640
 303-862-6376

VAIL VALLEY
 2121 N FRONTAGE RD W #190
 VAIL, CO 81657
 970-701-4279